



VIGO INDUSTRIES INSTALLATION GUIDE FOR SHOWER ENCLOSURE (MODEL VG06031)

SAFETY PRECAUTIONS

This Installation Guide uses the following symbols to indicate important information. Always observe the instructions indicated by these symbols.

WARNING

Instructions that, if ignored, could result in death or serious personal injury caused by incorrect handling or installation of the product. These instructions must be observed for safe installation.

CAUTION

The instructions for the following unit is based off of the Vigo brand shower base. The instructions can not be provided for any other installation other than that of the Vigo brand. The warranty will be voided if the following was not performed properly.

IMPORTANT

Maintenance and other important non-personal injury and non-material damage instructions or statements that should be observed.

It is highly advised to dry fit the unit prior to any installation.


INSTALLATION INSTRUCTIONS FOR SHOWER ENCLOSURE

OWNER'S MANUAL

PLEASE READ INSTRUCTIONS BEFORE PROCEEDING

Packing List



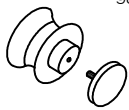

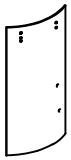

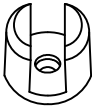






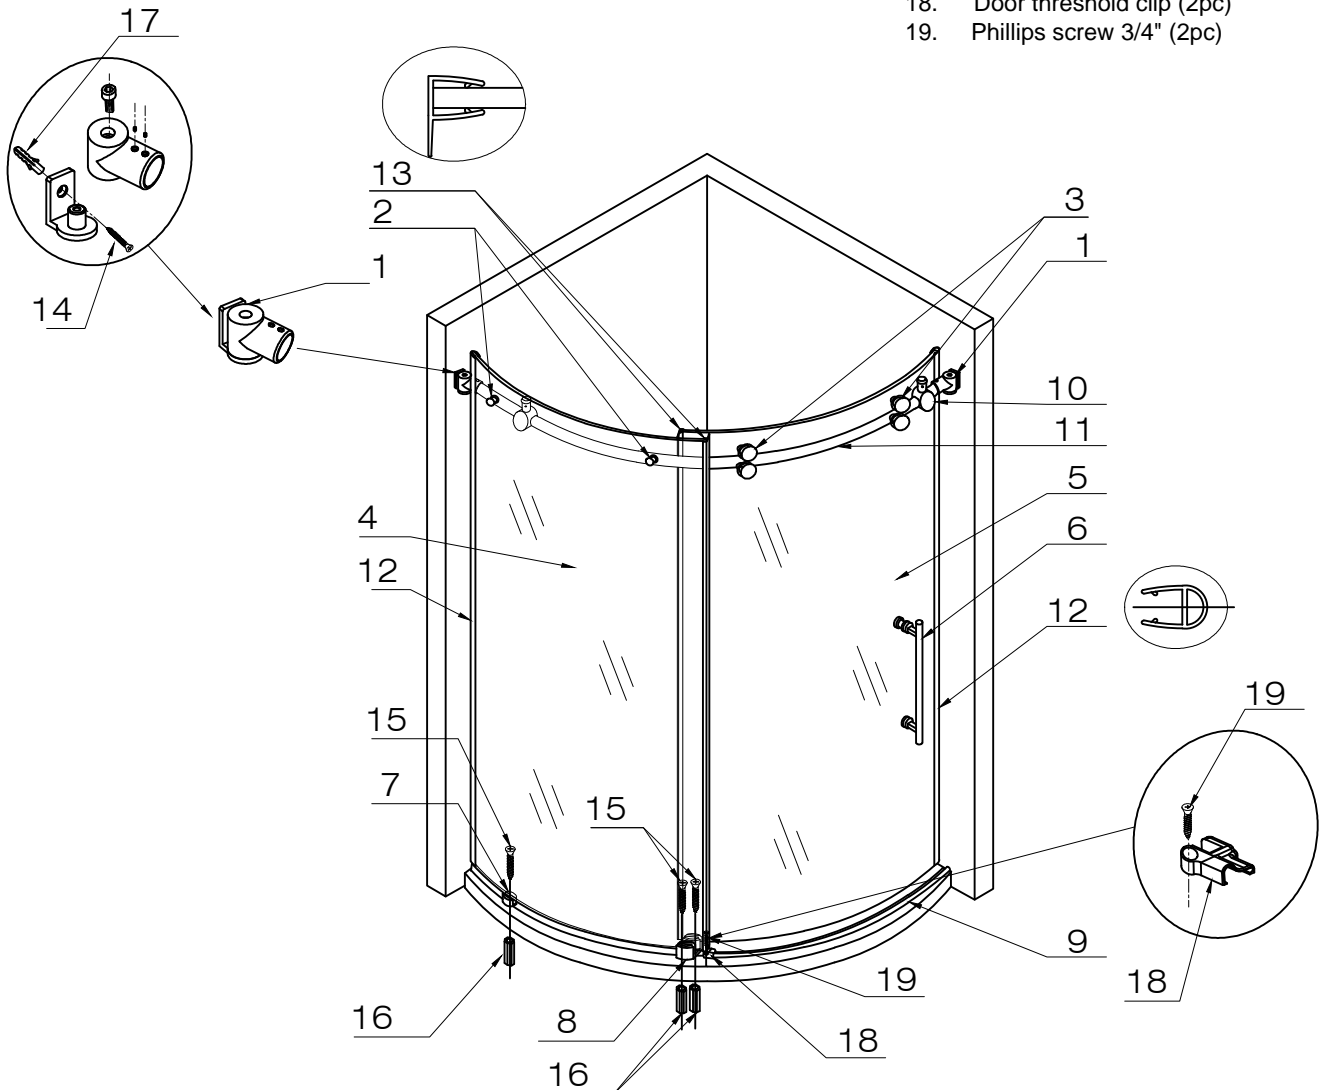


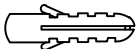


1. Wall mount brackets (2pc)
2. Fixed panel holders (2pc)
3. Rollers (4pc)
4. Fixed panel (1pc)
5. Door (1pc)
6. Handle assembly (1pc)
7. Fixed panel bottom clip (1 pc)
8. Bottom door guide (1 pc)
9. Door threshold (1pc)
10. Door stopper (2pc)
11. Structural rail (1pc)
12. Side seal strip (2pc)
13. Door seal strip (2pc + 1 extra)
14. Phillips screw 2" (2pc)
15. Phillips screw 1 1/8" (3pc)
16. Plastic anchor green (3pc)
17. Plastic anchor white (2pc)
18. Door threshold clip (2pc)
19. Phillips screw 3/4" (2pc)



GLASS THICKNESS 5/16"

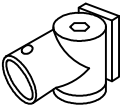NOTE: INSTALLATION MUST BE DONE BY A QUALIFIED, LICENSED PROFESSIONAL

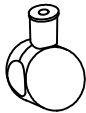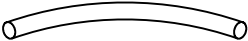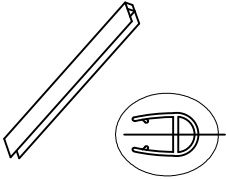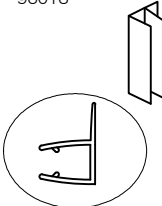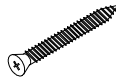MODEL VG06031

1. WALL MOUNT BRACKET ASSEMBLY 98062 	2. FIXED PANEL HOLDER 98066 	3. ROLLERS 98020 	4. FIXED PANEL 97017-36 	5. DOOR 97018 
6. HANDLE ASSEMBLY 98021 	7. FIXED PANEL BOTTOM CLIP 98064 	8. BOTTOM DOOR GUIDE 98063 	9. DOOR THRESHOLD 95007-36 95007-40 	10. DOOR STOPPER 98024 
11. STRUCTURAL RAIL 98065-36 98065-40 	12. SIDE SEAL STRIP 96001 	13. DOOR SEAL STRIP 96013 	14. PHILLIPS SCREW 2" 98036 	15. PHILLIPS SCREW 1 1/8" 98035 
16. PLASTIC ANCHORS 98037 	17. PLASTIC ANCHORS 98038 	18. DOOR THRESHOLD CLIP (LEFT & RIGHT) WITH CAPS (2PC) 94005R 94005L 	19. PHILLIPS SCREW 3/4" 98033 	


* - WITH HARDWARE AND WITHOUT SHOWER BASE (FULLY INSTALLED)

MODEL	DIM. "A"	DIM. "B"	DIM. "C"	HEIGHT	#4- FIXED PANEL (97017-36)	#5- DOOR (97018)
40 X 40	40 5/8"	40 5/8"	46 3/4"	74 5/8"	36 1/4" x 74 5/8"	36 3/8" x 74 3/8"
36 X 36	38"	38"	43 3/4"	74 5/8"	34" x 74 5/8"	34" x 74 3/8"

** - WITH HARDWARE AND WITH CORRESPONDING VIGO BRAND BASE VG06039 (FULLY INSTALLED)

MODEL	DIM. "A"	DIM. "B"	DIM. "C"	HEIGHT	#4- FIXED PANEL (97017-36)	#5- DOOR (97018)
40 X 40	43 5/8"	43 5/8"	46 3/4"	79 1/2"	36 1/4" x 74 5/8"	36 3/8" x 74 3/8"
36 X 36	40 1/2"	40 1/2"	43 3/4"	79 1/2"	34" x 74 5/8"	34" x 74 3/8"

A, B & C DIMENSIONS WERE MEASURED AFTER SHOWER ENCLOSURE WAS COMPLETELY INSTALLED

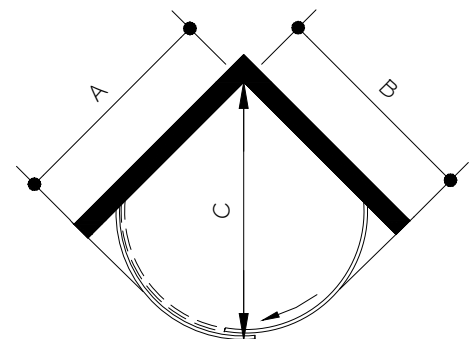

DEPICTION ABOVE IS ONLY TO BE USED AS A GUIDE. IN NO WAY SHOULD YOU ATTEMPT TO BUILD A BASE OR CUB OFF THIS DIAGRAM. PLEASE CONTACT VIGO INDUSTRIES TECHNICAL SUPPORT FOR ANY FURTHER INFORMATION OR ASSISTANCE.

⚠ **WARNING**

WE STRONGLY RECOMMEND THAT A LICENSED PROFESSIONAL INSTALL THIS SHOWER CABIN AND INCLUDE THE ASSISTANCE OF A SECOND PERSON TO INSTALL THE DOOR UNIT. INSTALLATION OF THE SHOWER DOORS BY AN INEXPERIENCED PERSON MAY RESULT IN GLASS BREAKAGE AND, CONSEQUENTLY, CAUSE PERSONAL INJURY OR DEATH.

BEFORE STARTING

Compare items on your invoice with what you have received. Carefully review the Packing List on page 2. If any items are missing contact Vigo Industries at 1-866-591-7792.

REQUIRED TOOLS

- Square and/or Phillips #1 and #2 screwdriver
- Flat head screwdriver
- Electric drill plus 1/32", 3/32", 1/8" or 1/4" drill bit (depending on wall)
- Level
- Measuring tape
- Pencil (non-permanent)
- Clear silicone caulking
- Utility knife

⚠ **WARNING**

- Handle fragile items with care to prevent injury or material damage.
- Glass on panels and doors is tempered glass and must never be cut to prevent personal injury.

⊘ **IMPORTANT**

- Fiberglass or acrylic construction might not be sufficiently strong enough to support the shower door enclosure. You should use the wood framing from behind the face edge of the stall to provide a secure mounting to the door. Apply a bead of silicone between the walls and base of the stall.
- For optimum performance, you should install the shower door perfectly level on a level surface.

IMPORTANT:

THE TEXTURED SIDE OF THE MATTE GLASS UNIT SHOULD ALWAYS BE INSTALLED ON THE OUTSIDE OF THE UNIT. (SEE CONFIGURATION DIAGRAM BELOW)

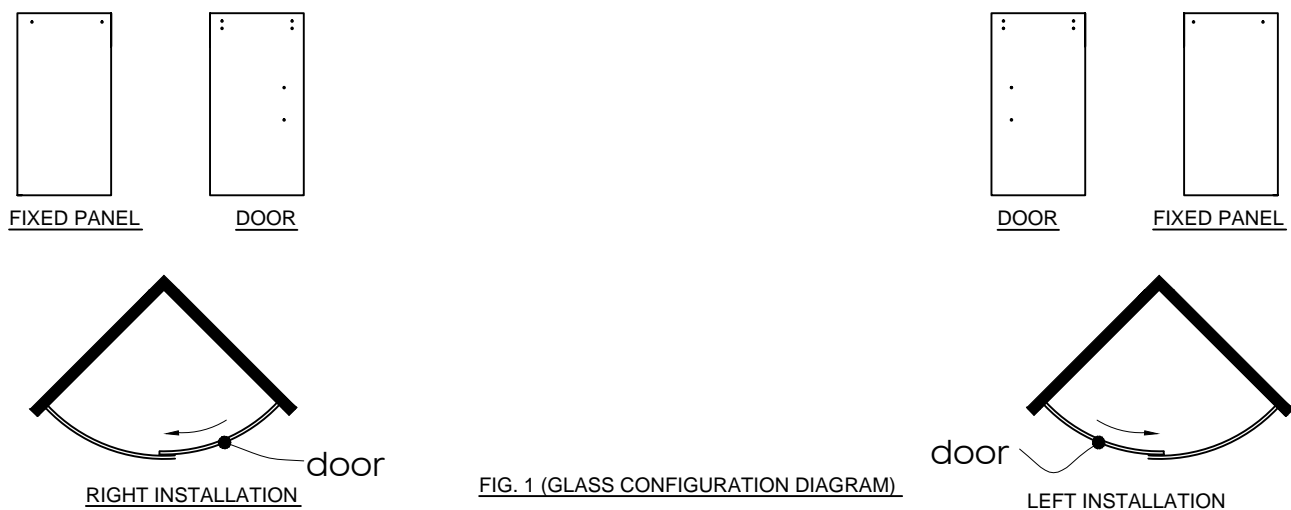


FIG. 1 (GLASS CONFIGURATION DIAGRAM)

MODEL VG06031

A. PRE-INSTALLATION

1. Due to individual site variations, exact guidelines for every situation cannot be supplied. The recommended framing and dimensional requirements shown are for a typical application and may vary depending on the site requirements.
2. Your shower enclosure should be installed in a leveled wall opening.
3. Ensure that there is sufficient structural support behind your shower wall to bare the weight of the door. If such is not the case, then prior to the installation of your shower wall you will need to reinforce the walls with wooden studs. see [FIG. 2].

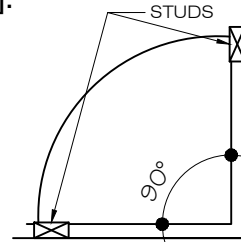


FIG.2

⊗ IMPORTANT

For ease of installation, place the door panel (#5) on the inside of the cabin before starting.

B. INSTALLING THE FIXED PANEL

*NOTE: Prior to any installation, mark lines on the floor and wall for proper dry fit. Proper planning is imperative for proper installation. The measurement of 71 1/4" should just be used as a guide. Your actual dimensions may vary.

1. Arrange the glass according to the configuration you've chosen from page 4. [SEE FIG.1]
2. Measure *71 1/4" from the floor or base. Mark this location. This will be the height of your wall mount bracket assembly (#1).
3. Mark holes on the wall for the mounting screws of the wall mount bracket assembly (#1) at the *71 1/4" height. Drill holes and place plastic anchors (#17) inside them. Preferred method of installation negates anchors and has the installation going right into studs.
4. Place the structural rail (#11) inside the wall mount bracket (#1). Tighten the two hex screws on the bracket. [SEE FIG.4] Repeat this step for the other bracket.
5. Place the seal strip (#12) from the wall side of the fixed panel (#4). [See FIG.3]
6. Screw the fixed panel (#4) to the structural rail (#11) with the fixed panel holders (#2). [SEE FIG.4]
7. Holding the fixed panel (#4) in a vertical position, place the fixed panel bottom clip (#7) and bottom door guide (#8) under the fixed panel. [SEE FIG. 5] Use a level to position it correctly. The fixed panel bottom clip (#7) should be approximately 3" away from the wall while the bottom door guide (#8) should be no more than 1" from the end of the fixed panel.
8. Mark the location of the fixed panel bottom clip (#7) and bottom door guide (#8) on the floor.
9. Remove the front fixed panel (#4) from the position in the opening. Drill holes where you marked your locations for the fixed panel bottom clip (#7) and bottom door guide (#8) and place the plastic anchors (#16) inside them. Screw in the fixed panel bottom clip (#7) and the door bottom guide (#8) to the floor with 1 1/8" screws (#15).
10. Place the fixed panel (#4) back into the proper position by screwing it to the structural rail (#11) with the fixed panel holders (#2). [SEE FIG. 5]

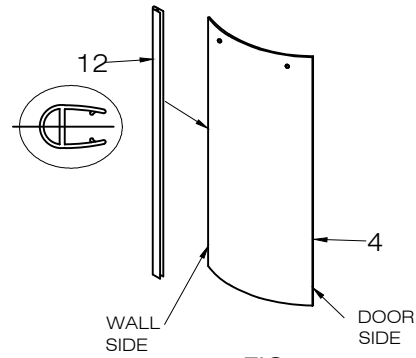


FIG. 3

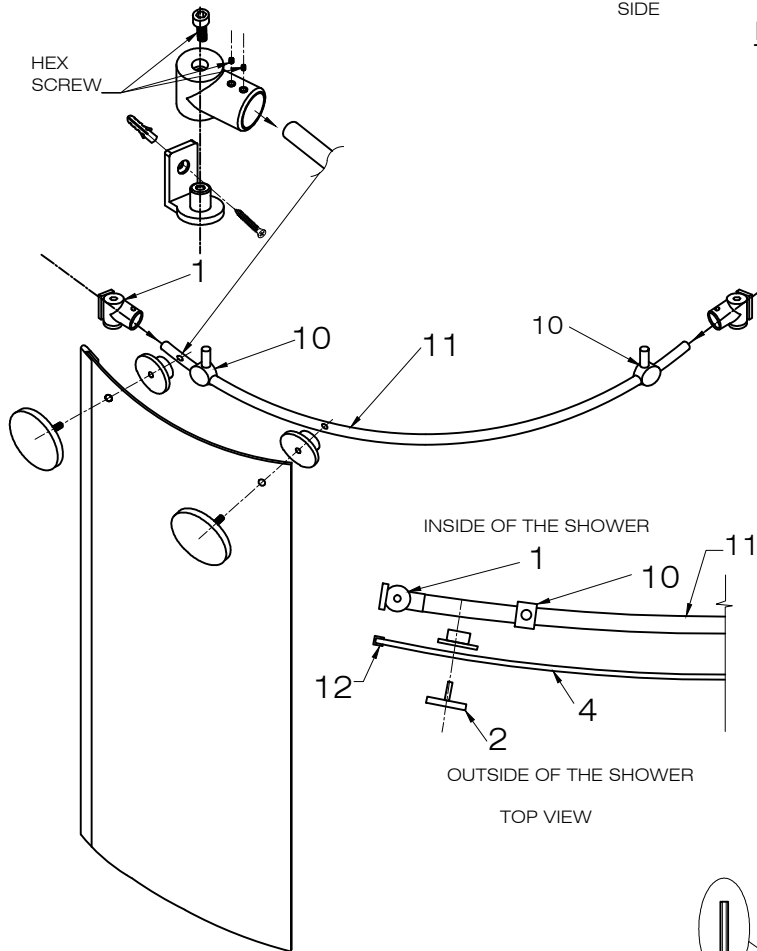


FIG. 4

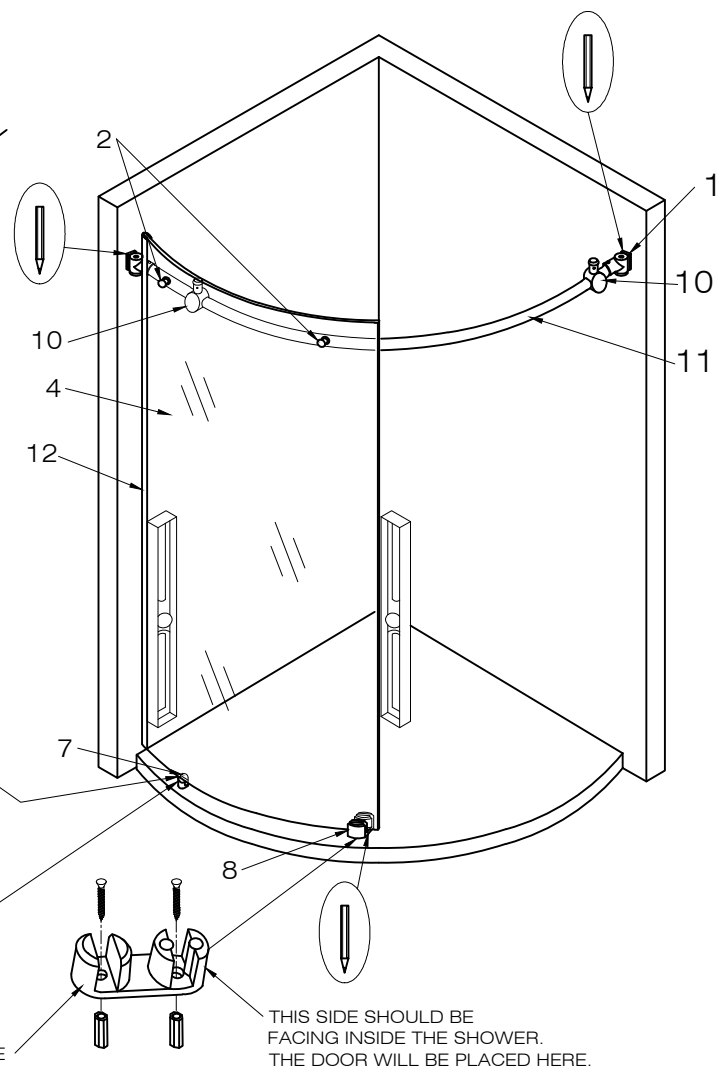




FIG. 5

THIS IS THE SIDE THE
FIXED PANEL WILL BE
PLACED IN.

THIS SIDE SHOULD BE
FACING INSIDE THE SHOWER.
THE DOOR WILL BE PLACED HERE.

C. INSTALLING THE DOOR

1. Remove the rollers (#3) from the box, note that these are fully installed. Carefully unthread the cap with a small head allen key. You will see a big hex screw, this is referred to as the roller height adjustment screw.
2. Use the provided allen key to unscrew the adjustment screw and dismantle the roller. Place the screw through door panel top holes and attach the two top rollers onto the door panel (#5). [SEE FIG.6]
3. Place the two top rollers and the door panel (#5) assembly onto the structural rail (#11). [SEE FIG.7] Note that the rollers have a built-in mechanism that will provide adjustment for walls that are not 100% perpendicular to the floor. If necessary, unscrew the adjustment screw and rotate the individual roller. This will raise or lower the height that the roller sits on the structural rail. Please refer to pages 13-16 for "Roller Adjustments to Accommodate Out of Square Openings." Once the rollers are properly adjusted and the door sits straight in the closed position, the adjustment will be complete. Fully tighten the adjustment screws and re-install the roller caps. [SEE FIG.6A]
4. Verify that the bottom of the door aligns with the notch in the bottom door guide (#8). [SEE FIG. 7A]
5. Screw the two bottom rollers (#3) to the door panel. [SEE FIG.7] Rotate the bottom rollers until they are in the tightest position against the structural rail (#11).
6. Adjust the stoppers' position on the structural rail and tighten the hex screws.

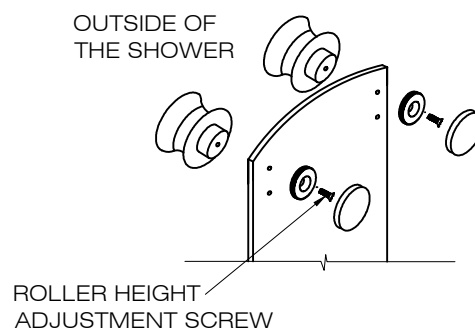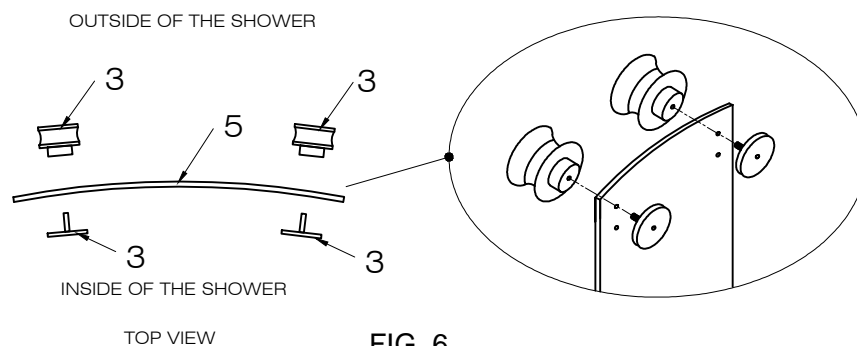

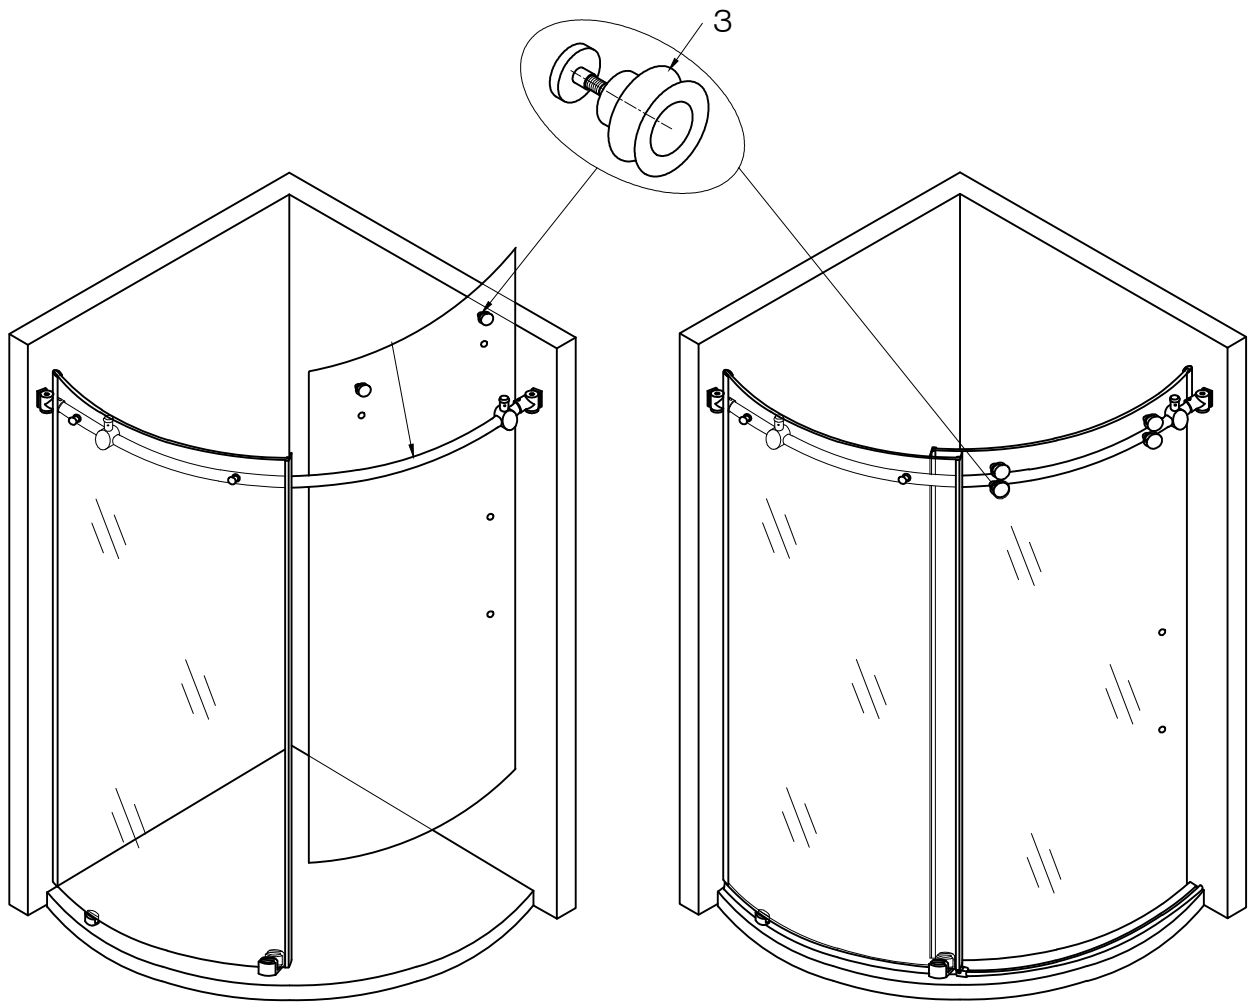


FIG. 7

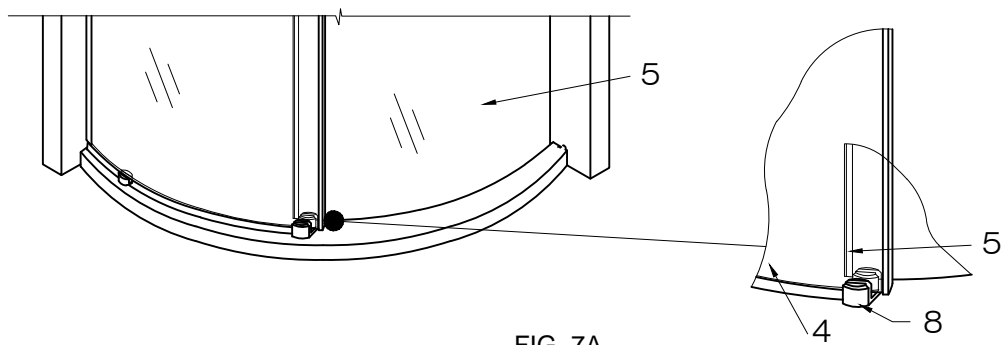


FIG. 7A

D. INSTALLING THE THRESHOLD

⊘ IMPORTANT

IN CASE THE THRESHOLD IS TOO LONG, CUT IT WITH A HACKSAW UNTIL IT FITS THE OPENING.

1. Seal the bottom of the door threshold clip (#18) with clear silicone.
2. Seal the bottom side of the threshold (#9) with clear silicone.
3. Slide the door threshold clip (#18) to the fixed panel (#4). Align the threshold with the door and press down firmly.
4. Screw the door threshold clip (#18) into the base or floor with 3/4" phillips screw (#19).
Silicone the cap to part (#18). [SEE FIG. 8]

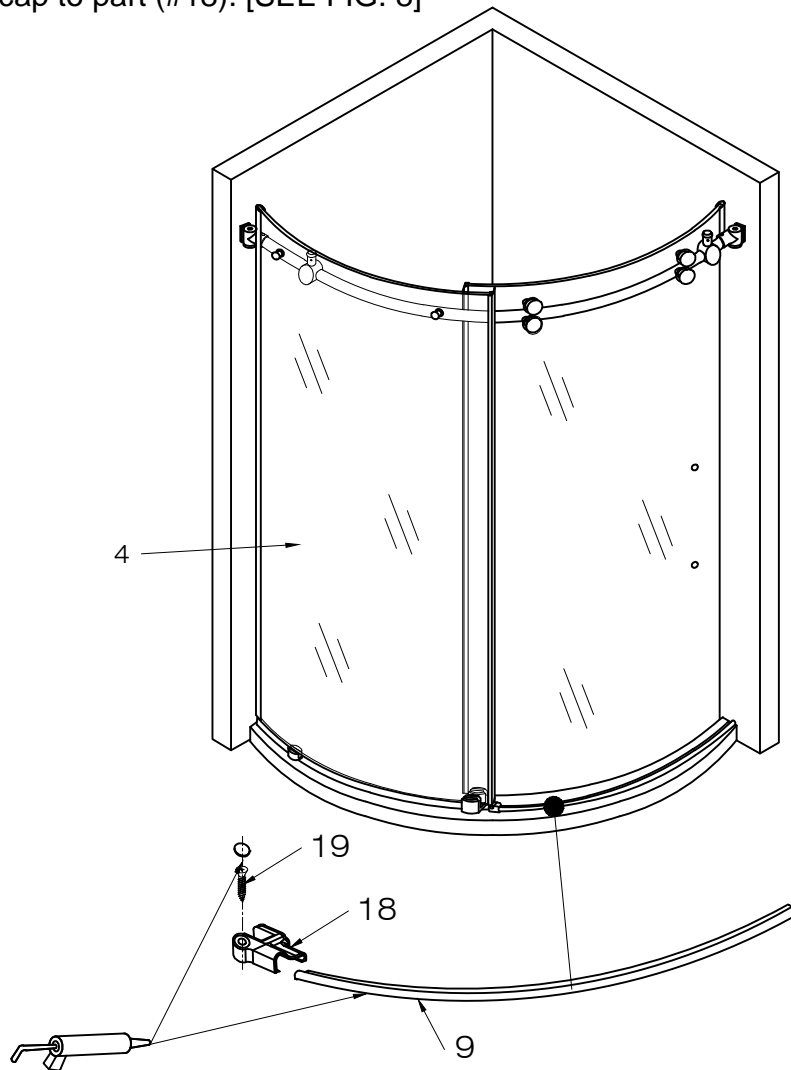


FIG. 8

E. INSTALLING THE HANDLE

1. Unscrew the handle holders from the handle assembly (#6).
2. Place the handle to the position on the door. Place plastic washers (supplied) on each side of the door. [SEE FIG.9]
3. Tighten the handle nuts from inside the shower.
4. The door stopper's position (#10) may have to change now to stop the handle from hitting the fixed panel when in the open position. Adjust accordingly. [SEE FIG. 10]

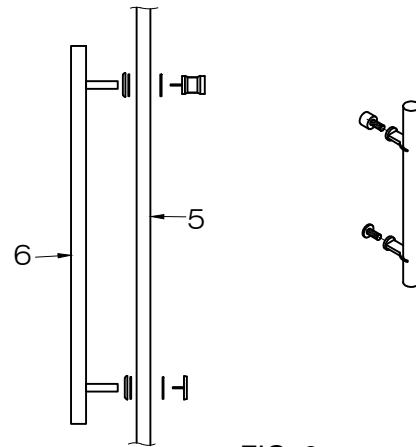


FIG. 9

F. INSTALLING THE WATER SEAL STRIP

1. Place the seal strips (#12 and 13) to the door and to the fixed panel, respectively. [SEE FIG.10]
2. Trim the flange on the seal strips (#13) so that there is enough clearance for the door to roll without the seal strips hitting against the rollers or door stopper.

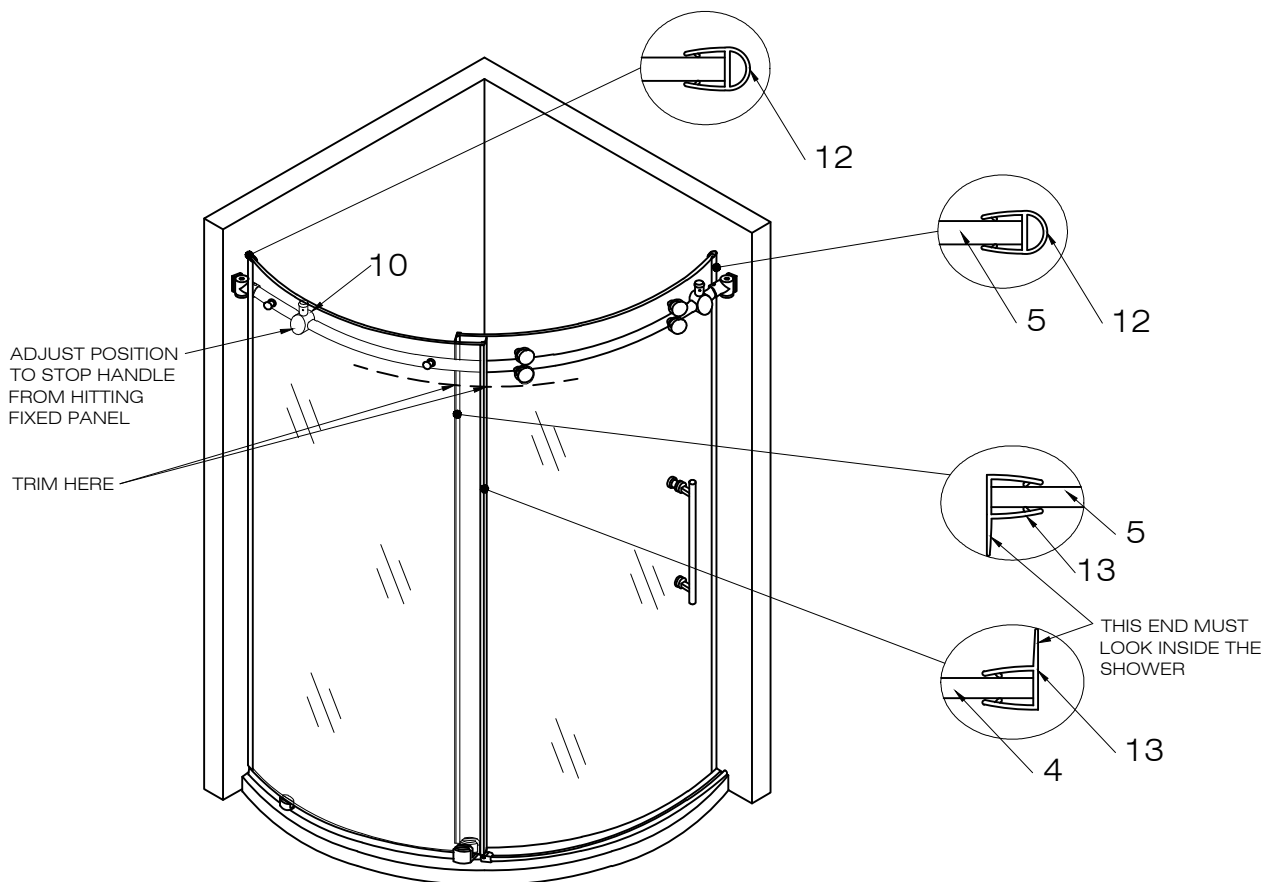


FIG.10

G. APPLYING THE SILICONE

1. Apply clear silicone caulking along the wall and floor of the shower enclosure interior. [SEE FIG.11]


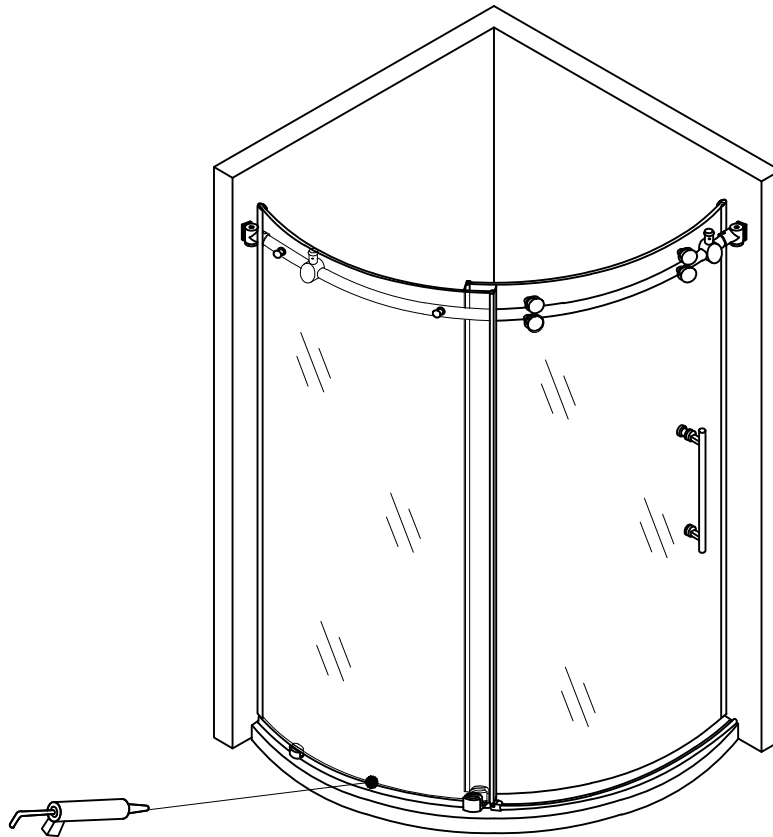


FIG.11


NOTE: DO NOT ALLOW DIRECT WATER ONTO DOOR SEAL STRIP.

WAIT 24 HOURS BEFORE USING THE SHOWER.

MODEL VG06031

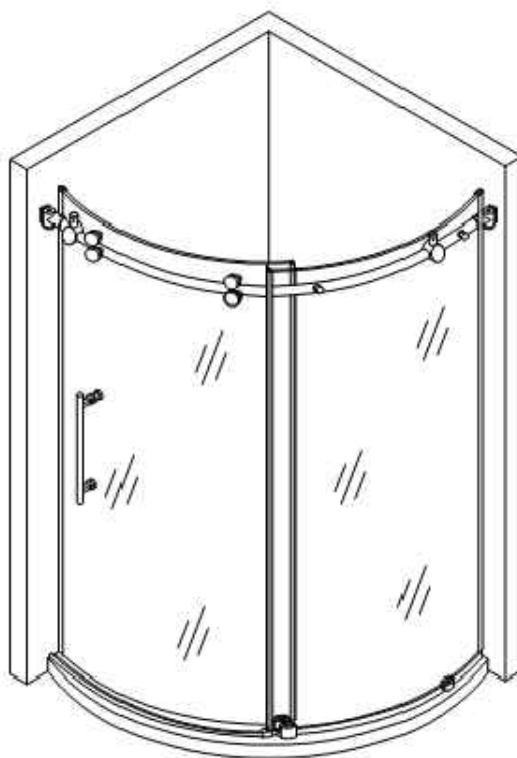

VG06031 LEFT DOOR

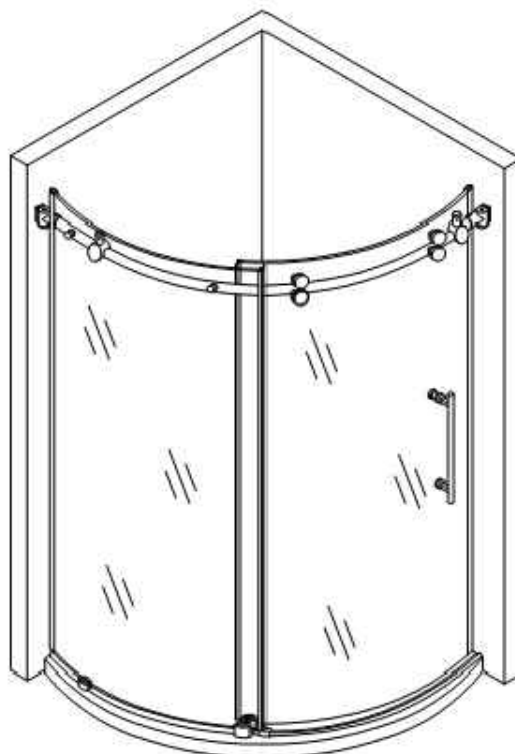

VG06031 RIGHT DOOR

MODEL VG06031

IMPORTANT

ROLLER ADJUSTMENTS TO ACCOMMODATE OUT OF SQUARE OPENINGS

NOTE: There is a 3/8" adjustment in the roller to use in the case that your walls are not plumb and level. Using an allen key, you will be able to adjust the roller to accommodate for the variance.

1. Loosen the hex screw to allow for movement. Then place the allen key in the small hex hole as shown and roll it to the right or left to make the adjustment. [See Fig.1]
2. Fig. 1A displays the 3 different positions.
3. If your walls are plumb and level, follow the configuration in Fig. 2.
4. In the case that your wall is off on the top, the rollers should be adjusted as shown in Fig. 3.
5. In the case that your wall is off on the bottom, the rollers should be adjusted as shown in Fig. 4.

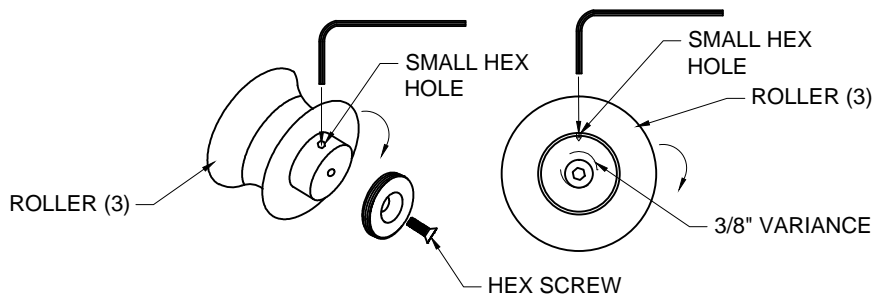


FIG. 1


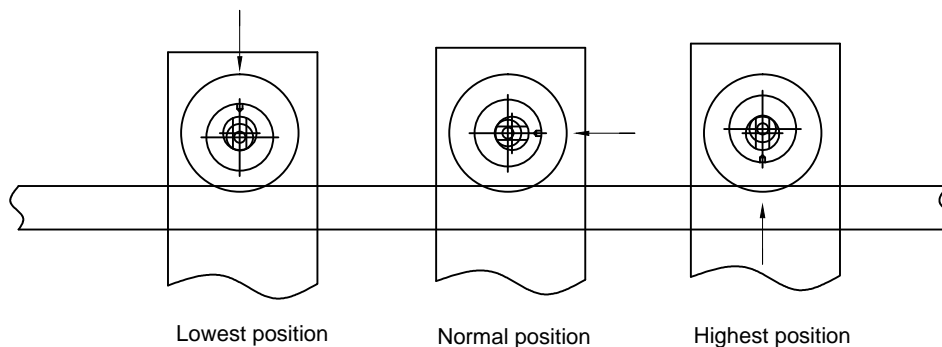


FIG. 1A

IMPORTANT


NOTE: These adjustments are approximate. You may need to adjust the direction of the small hex hole to meet your needs.

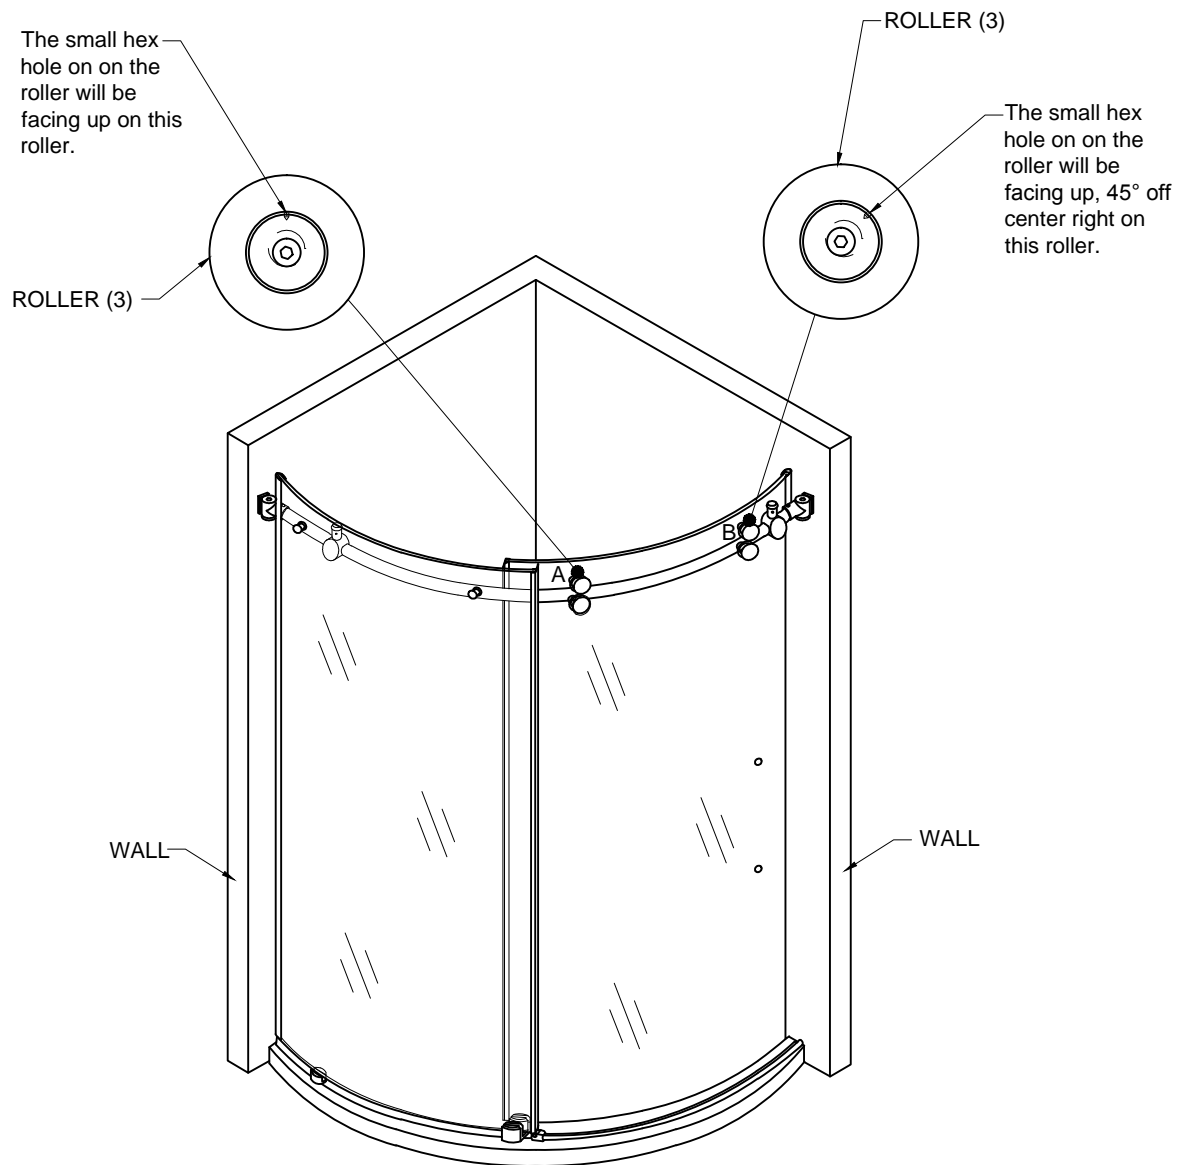

STRAIGHT WALLS

WALL DIRECTION	ROLLER "A" SMALL HEX HOLE DIRECTION	ROLLER "B" SMALL HEX HOLE DIRECTION
STRAIGHT WALL	UP	UP, 45° RIGHT


FIG. 2

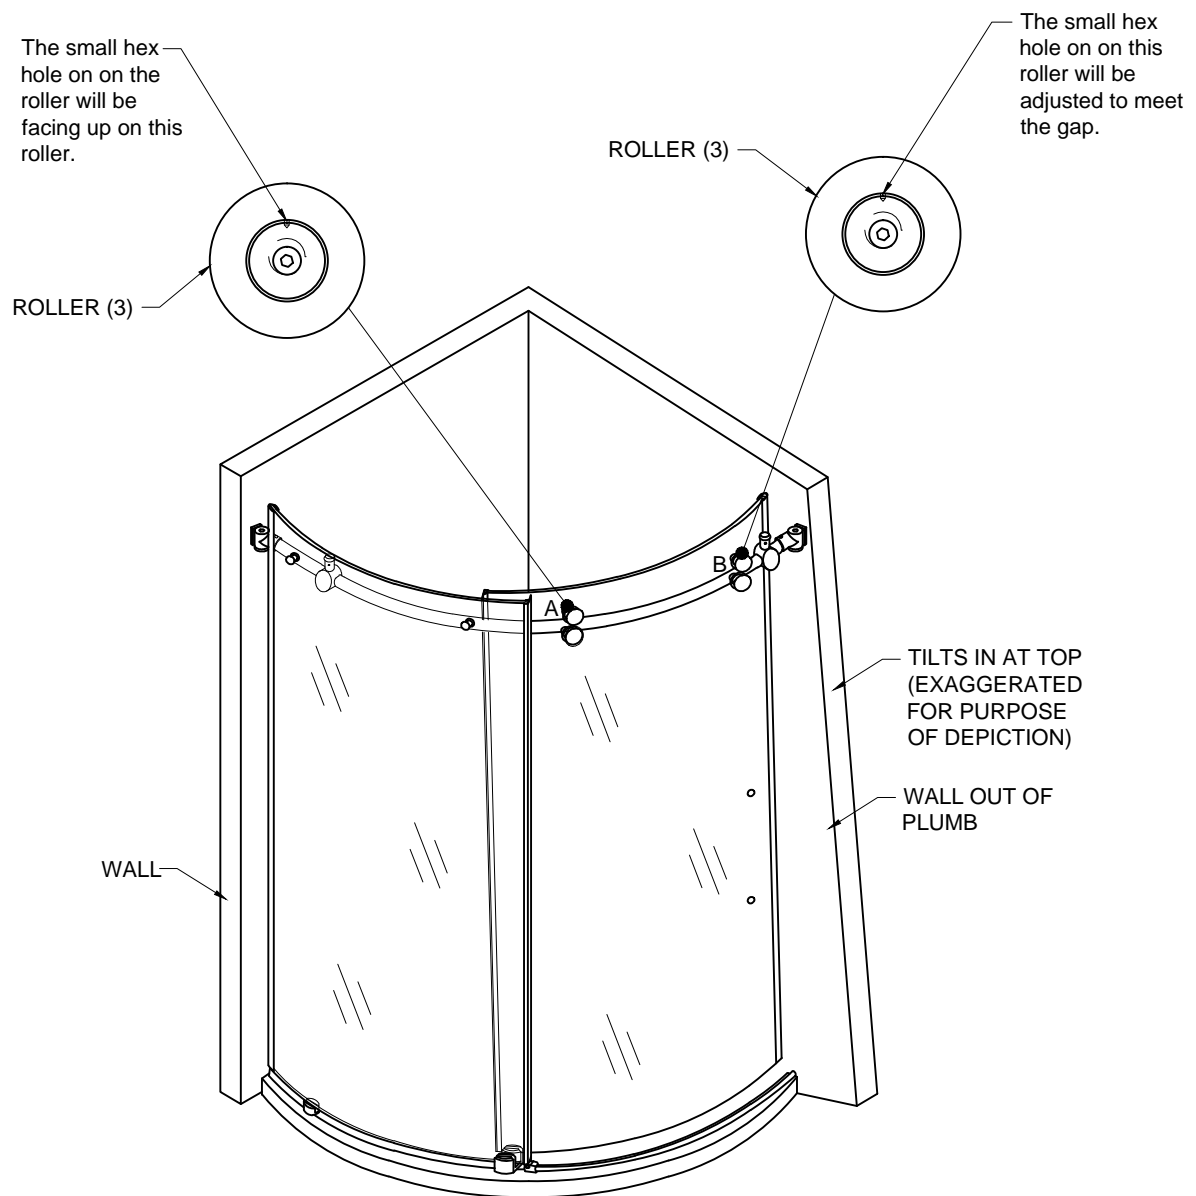

TOP ANGLED WALL

WALL DIRECTION	ROLLER "A" SMALL HEX HOLE DIRECTION	ROLLER "B" SMALL HEX HOLE DIRECTION
TOP ANGLED	UP	ADJUST AS NEEDED

FIG. 3

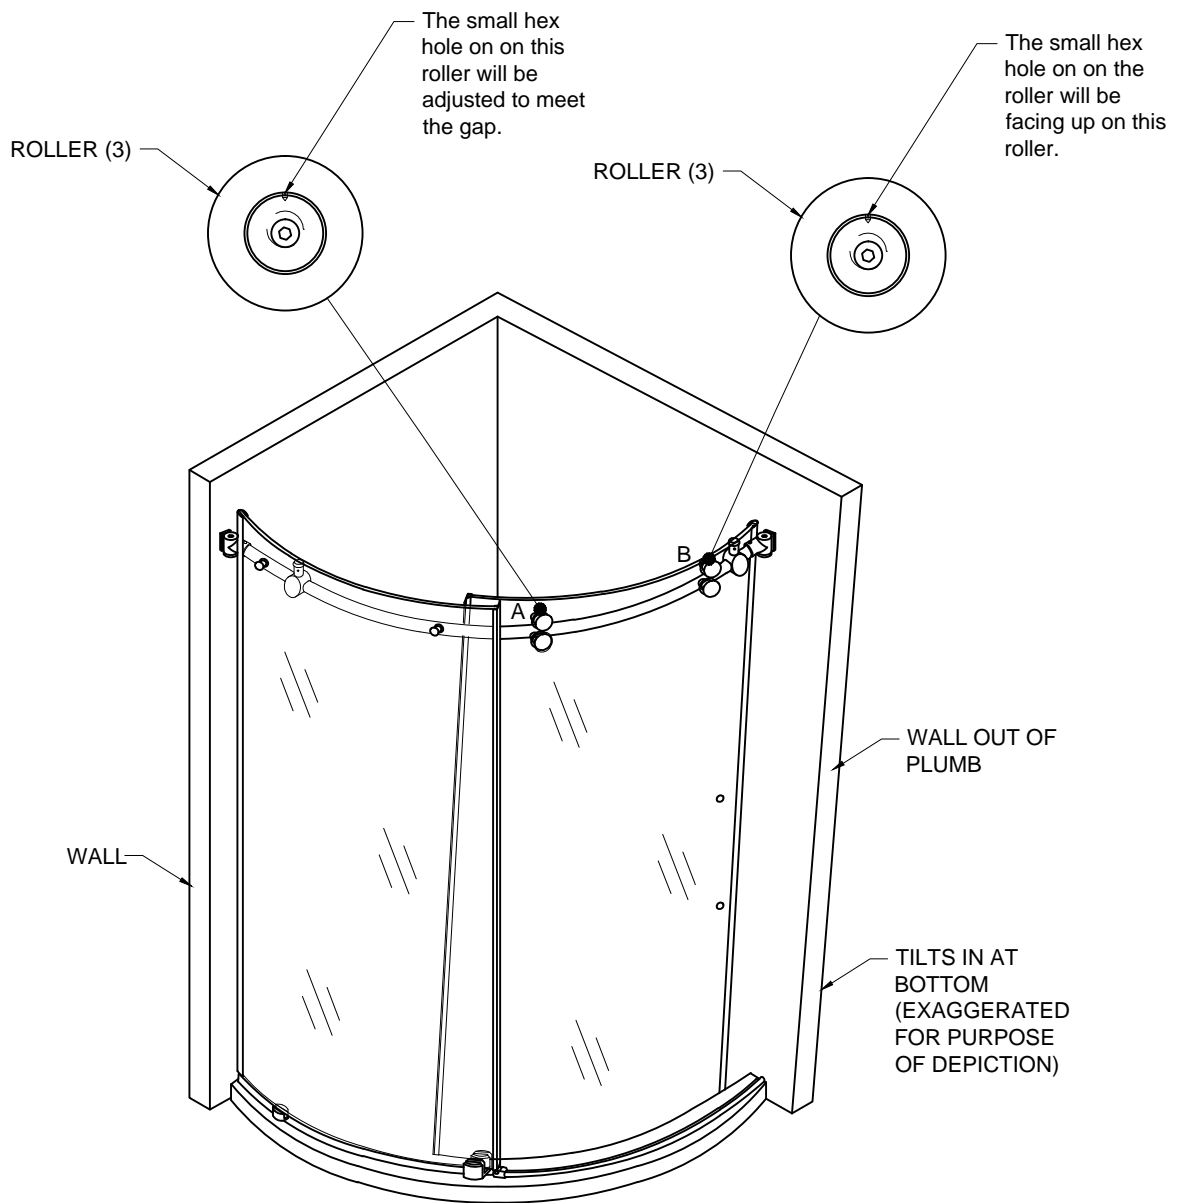

BOTTOM ANGLED WALL

WALL DIRECTION	ROLLER "A" SMALL HEX HOLE DIRECTION	ROLLER "B" SMALL HEX HOLE DIRECTION
BOTTOM ANGLED	ADJUST AS NEEDED	UP

FIG. 4

CLEANING INSTRUCTIONS FOR THE SHOWER CABIN AND DOOR PANEL

- A. Use mild liquid household cleaners to keep metal surface bright and clean. Rinse well and dry with a clean cloth.
- B. Remove dust with a soft, damp cloth.
- C. Use rubbing alcohol to clean and remove grease, oil, paint, and ink.
- D. Accidental scratches or stains will rarely show. If they do show, they can be easily removed with a liquid automobile polish.

IMPORTANT

- Do NOT use abrasive cleaners, scrapers, metal brushes, or any items/product that would scratch and/or dull surface.
- Do Not allow surface to come into contact with acetone (nail polish remover), dry cleaning solution, lacquer thinner, gasoline, or any other similar product.
- Make sure to regularly inspect your Vigo Brand shower enclosure and tighten any hardware that may have loosened during the use process. Vigo understands that your home is a moving entity and designs the Vigo Brand shower enclosure to adjust to your home needs. It is the responsibility of the home owner/end user to maintain the integrity of their new purchase. By regularly inspecting and tightening the hardware as needed their Vigo Brand shower enclosure will last for many years with perfect execution.



VIGO INDUSTRIES, LLC ("VIGO")
SHOWER ENCLOSURE LIMITED LIFETIME WARRANTY

EFFECTIVE JANUARY 1, 2010

VIGO offers the following limited warranty on each of its Shower Enclosure products* (the "Product") and the components thereof. This warranty extends only to the original owner or end-user for personal household use. For commercial uses, additional limitations apply.

VIGO warrants the structural glass component of the Product to be free from defects in workmanship and materials under normal use and service for the period commencing from the initial date of purchase by the owner or end-user, contractor, or builder, from VIGO or an authorized VIGO dealer, through the lifetime of the original owner or end-user.

VIGO warrants the hardware components of the Product to be free from defects in workmanship and materials under normal use and service for a period of two (2) years from the initial date of purchase by the owner or end-user, contractor, or builder, from VIGO or an authorized VIGO dealer.

VIGO warrants the seal strip components of the Product to be free from defects in workmanship and materials under normal use and service for a period of one (1) year from the initial date of purchase by the owner or end-user, contractor, or builder, from VIGO or an authorized VIGO dealer.

Subject to the Warranty Service provision below, any product reported to the authorized dealer or to VIGO as being defective within the warranty period will be repaired or replaced (with a product of equal value) at the option of VIGO. This warranty extends to the original owner or end-user and is not transferable to a subsequent owner.

Neither the distributor, authorized VIGO dealer, nor any other person has been authorized to make any affirmation, representation, or warranty other than those contained in this warranty. Any affirmation, representation, or warranty other than those contained in this warranty shall not be enforceable against VIGO or any other person.

VIGO reserves the right to modify this warranty at any time, it being understood that such modifications will not alter the warranty conditions applicable at the time of sale of the products in question.

Limitations

This warranty shall not apply to instances of incorrect operating procedures, breakages, or damages caused by fault through improper installation, carelessness, abuse, misuse, misapplication, improper maintenance, or alteration of the Product, as well as chemical or natural corrosion, accident, fire, flood, an act of God, or any other casualty. Avoid abrasive cleaners, steel wools, and harsh chemicals as these will scratch, damage, and / or dull the product and / or finish and void this warranty. The owner/end-user of the Product covered by the present warranty is entirely responsible for its proper installation and any applicable plumbing or electrical wiring. VIGO neither installs nor supervises the installation nor hires a contractor for this purpose; consequently, VIGO cannot be held responsible for any default, breakage, or damages caused thereby or resulting thereof, either directly or indirectly.

The owner/end-user must provide access to the components of the Product as described in the installation guide so that VIGO can execute the warranty specified herein. If such access is not available, all expenses to provide said access will be the responsibility of the owner/end-user.

This warranty does not apply to Products that have not been installed or operated in accordance with instructions supplied by VIGO and all applicable rules, regulations, and legislation pertaining to such installations.

This warranty does not apply unless the VIGO Product is installed by fully insured licensed professionals. VIGO strongly recommends that such licensed professionals have experience in the installation of bathroom and kitchen products. Installation of certain products, including, without limitation, glass products (i.e., shower doors and glass sinks) by an inexperienced person may result in glass breakage and, consequently, cause personal injury or death.

VIGO is not liable for personal injuries or deaths to any persons or for any direct, special, incidental, or consequential damage, loss of time, loss of profits, inconvenience, incidental expenses, labor or material charges, or any other costs resulting from the use of the product or equipment or pertaining to the application of the present warranty, or resulting from the removal or replacement of any product or element or part covered by this warranty.

EXCEPT AS OTHERWISE PROVIDED ABOVE, VIGO MAKES NO WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE OR COMPLIANCE WITH ANY CODE.

In any case, VIGO cannot be held liable for any amount over and above the purchase price paid for the Product by the owner/end-user, contractor, or builder.

Commercial Limitations

In addition to the above conditions and limitations, the warranty period for products installed for commercial applications or used in commercial ventures is one (1) year from the initial date of purchase by the owner/end-user, contractor, or builder from an authorized dealer. VIGO is not responsible for loss of use or profit under any circumstances. If the product is used as a display, the warranty period begins when the product is placed on display. This warranty gives the owner/end-user specific legal rights. The owner/end-user may also have other rights which can vary from one state or province to another.

Warranty Service

In order to obtain service provided under this warranty during regular business hours, contact the dealer or distributor who sold the unit, or contact VIGO directly. VIGO will provide the warranty service described above when the following conditions have been met: the failure is of the nature or type covered by the warranty; the user has informed an authorized VIGO Agent or VIGO's warranty service department representative of the nature of the problem during the warranty period; conclusive evidence (e.g., proof of purchase or installation) is provided to the foregoing by the user proving that the failure occurred or was discovered within the warranty period; an authorized independent service person or company representative has been permitted to inspect the product during regular business hours within a reasonable time after the problem was reported by the user. VIGO's warranty obligation shall be discharged upon tender of replacement or repair. The customer's refusal to accept the tender terminates VIGO's warranty obligations.

*Certain models are pending approval.

Certification may be ended by VIGO or certification agencies without notice.